




1. Drill, vacuum, insert glue and chemical anchor.

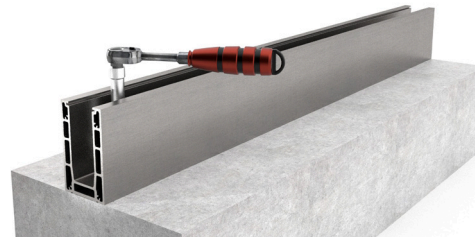


2. Place the profile and secure using a torque wrench set to 40 Nm.

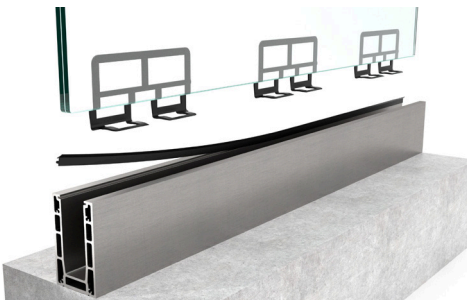

3. Place back rubber seal, back plastic insert and laminated glass.

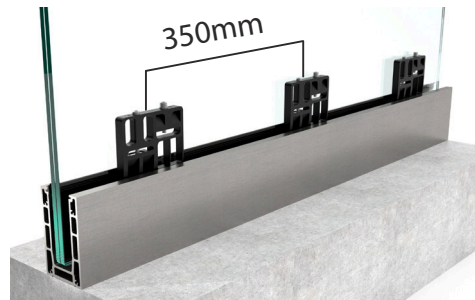


4. Insert the adjustable system and align the glass as shown in the bigger picture below.

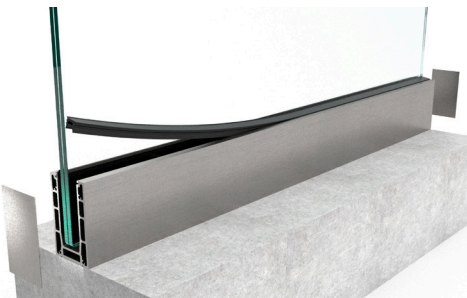

5. Place front rubber seal and front and end covers.



6. Finished look.

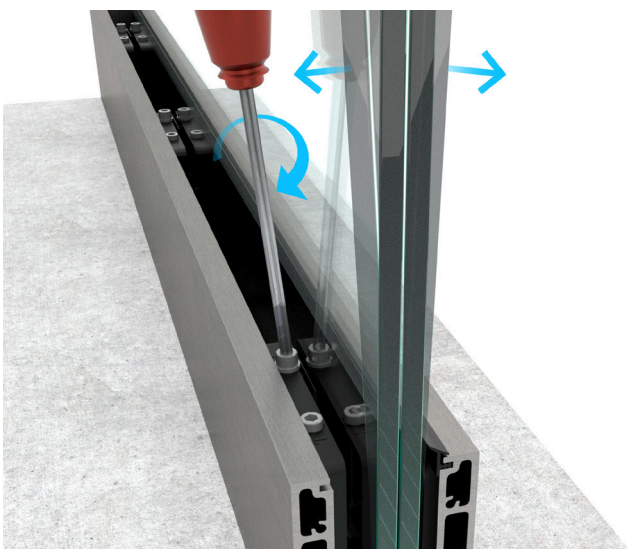

To achieve perfect alignment use the two bolts. First one tilts the glass towards you, the second opposite direction. When perfect alignment is achieved secure both bolts.